


SONOSAX SX-M32 VERSIONS AND OPTIONS PANELS

STANDARD VERSION

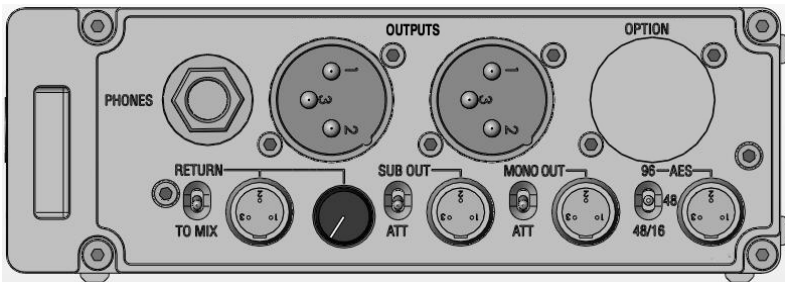

XLR3-M: Main Out Left
 XLR3-M: Main Out Right
 OPTION: See available Option panels below

XLR-3 / Main Out

Pin 1 = GND
 Pin 2 = Hi +
 Pin 3 = Lo -

TA-3 / Return & Sub-Out

Pin 1 = GND
 Pin 2 = Left
 Pin 3 = Right


TA-3 / Mono Out

Pin 1 = GND
 Pin 2 = Mono Out
 Pin 3 = GND


TA-3 / AES Out

Pin 1 = GND
 Pin 2 = Hi +
 Pin 3 = Lo -

DIRECT OUTPUTS VERSION "A"

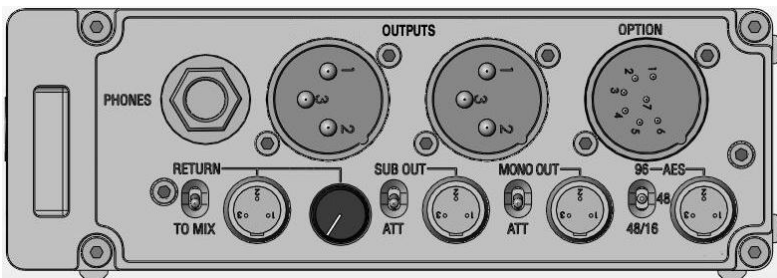

DIRECT OUTPUTS VERSION "B"

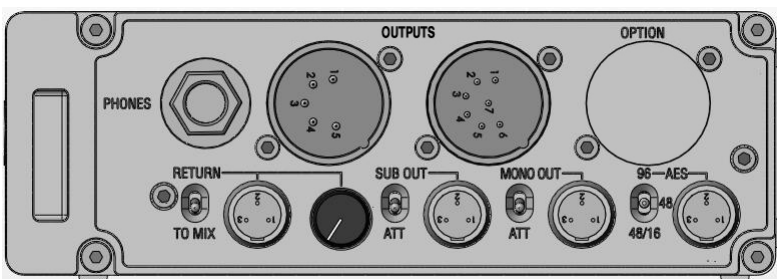

XLR5-M: Main Outs Left & Right
 XLR-7M: Channel's Direct Outs, Pre and Post Fader
 OPTION: See available Option panels below

XLR-5M :


1 = GND
 2 = Left Hi +
 3 = Left Low -
 4 = Right Hi +
 5 = Right Lo -

XLR-7M :

1 = GND
 2 = CH1 Pre-Fader Out
 3 = CH1 Post-Fader Out
 4 = CH2 Pre-Fader Out
 5 = CH2 Post-Fader Out
 6 = CH3 Pre-Fader Out
 7 = CH3 Post-Fader Out

OPTION PANELS


HIROSE 10 PIN RM15TRD-10S

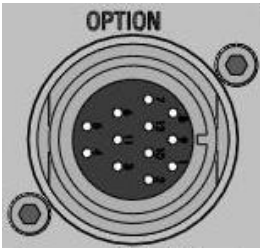

Compatible with: AudioDevelopment / SQN / SOUND DEVICES / COOPER / MIXY
Mating cable connector: RM15TPD-10P

Pin 1 = Out LEFT Hi +
Pin 2 = Out LEFT Lo -
Pin 3 = Out RIGHT Hi +
Pin 4 = Out RIGHT Lo -
Pin 5 = Return LEFT +
Pin 6 = Return LEFT Gnd
Pin 7 = Return RIGHT +
Pin 8 = Return RIGHT Gnd
Pin 9 = GND
Pin 10 = GND


HIROSE 12 PIN HR10A-10R-12S

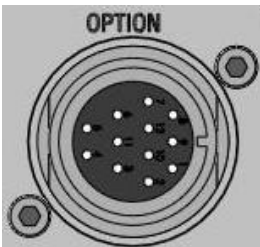

Compatible with: SQN-5S
Mating cable connector: HR10-10P12P

Pin 1 = Sub-Out LEFT
Pin 2 = Sub-Out RIGHT
Pin 3 = GND
Pin 4 = Mix Bus In LEFT
Pin 5 = Mix Bus In RIGHT
Pin 6 = GND
Pin 7 = CH1 Post-Fader Out (can be changed to PRE fader)
Pin 8 = CH2 Post-Fader Out "
Pin 9 = CH3 Post-Fader Out "
Pin 10 = ---
Pin 11 = ---
Pin 12 = ---


TAJIMI 12 PIN PRC 05R 12F

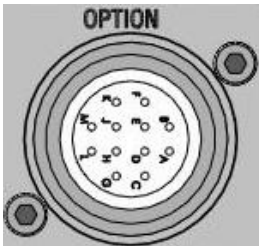

Compatible with: SQN / Mixy / Sony
Mating cable connector: PRC05P12M

Pin A = Out LEFT Hi +
Pin B = Out LEFT Lo -
Pin C = Out RIGHT Hi +
Pin D = Out RIGHT Lo -
Pin E = Return LEFT +
Pin F = Return LEFT Gnd
Pin G = Return RIGHT +
Pin H = Return RIGHT Gnd
Pin J = GND
Pin K = GND
Pin L = Sub-Out LEFT
Pin M = Sub-Out Right

NEUTRIK MINICON MRF12

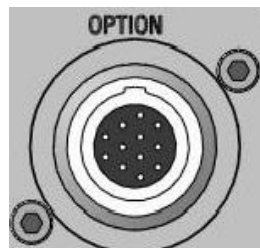

Compatible with: Mixy
Mating cable connector:

Pin 1 = Sub-Out LEFT (to HF transmitter)
Pin 2 = DC IN Power / 6 to 18VDC
Pin 3 = GND
Pin 4 = GND
Pin 5 = Sub-Out RIGHT (to HF transmitter)
Pin 6 = IN 3 Hi + (from HF receiver)
Pin 7 = IN 3 Lo - (from HF receiver)
Pin 8 = DC OUT 6 to 8,2VDC (max xxmA)
Pin 9 = IN 2 Hi + (from HF receiver)
Pin 10 = GND
Pin 11 = IN 2 Lo - (from HF receiver)
Pin 12 = ---